


Notice : Changes or modifications not expressly approved could void warranty.

IMPORTANT NOTE : To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted.

Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void warranty.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

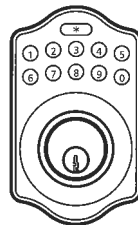

ELECTRONIC
DEADBOLT LOCK 

REMOTE CONTROL MANUAL

Remote is supplied pre-programmed.


Please refer to the following instructions to change settings.

FEATURES

1. Power & Battery

1-1 Power : CR2025 lithium button cell battery needed.

1-2 Changing Battery : Please use slotted head screwdriver to separate the plastic cover and change the battery.

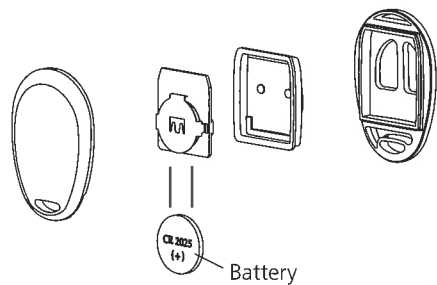


1-3 Settings will not be changed or eliminated because of battery replacement.

2. Transmission Distance

30 metres without any obstruction.


3. Lock the lockset

Press  on remote once

→ Green light flashes twice with 2 short beeps.

→ The door is locked.

4. Unlock the Lockset

Press  on remote once.


→ Green light flashes twice with 2 short beeps.

→ The door is unlocked.


PROGRAMMING

1. Add Remotes (under unlock status)

(1) Enter Programming Code

→ Press 

→ Enter  

→ Press 

→ Press any button on remote

→ Usable after 8 seconds


(2) 3 short warning sounds when adding the same remote.

The remote is still valid, and will not occupy the number of other remotes available.


(3) Up to 5 remote controls available (can be added).

2. Delete All Remotes

(1) Enter Programming Code

→ Press 

→ Enter  

→ Press 

(2) You cannot delete one specific remote.

When you delete remotes, you delete all of them.

CAUTION

Do not put in the battery backward, it may cause the remote to malfunction.