




# HOW TO CHANGE KEY HOLE POSITION

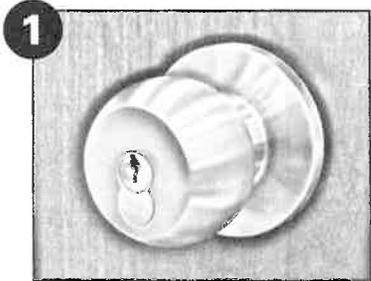


Wrong key hole position.

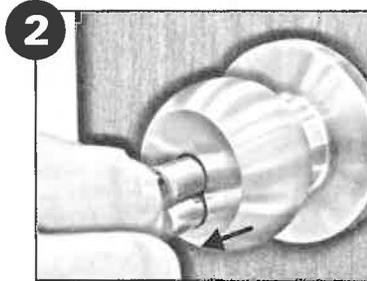


Use control key to take out cylinder.

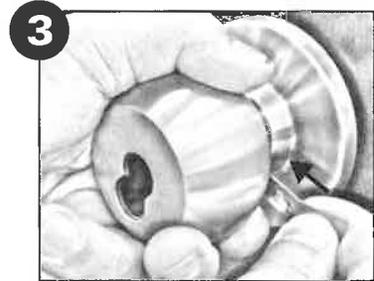


Turn the knob clockwise until the knob catch appears in the small slot. Use knob catch tool to depress the knob catch and pull the knob out.

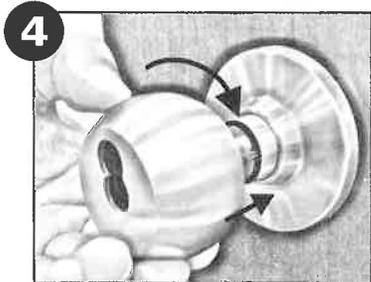

Rotate knob to have figure eight hole in the upper area of knob. Align slot on side of knob with knob catch on spindle then push firmly in until knob catch clicks into slot on knob.

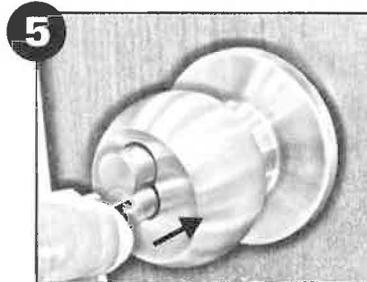

Put cylinder into the knob.

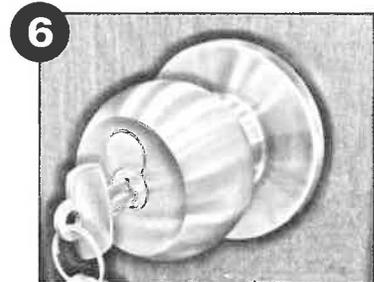

Right key hole position.