

FLOOR STOPS


GENERAL HARDWARE

DOMESTOP-LOW

T201



T200 C26D

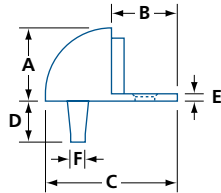

- For use with low or no threshold
- Heavy-duty zinc die-cast
- Non-marking rubber stop
- Mounting hardware included: wood screw and plastic anchor

- #T201 Riser allows easy conversion to threshold or carpet use

T201 C26D
RISER



MODEL	FINISH	A	B	øC	D	E	øF	/BOX	/CASE
T200	C26D, C3, C4	1 (25.4)	7/8 (22.2)	1 3/4 (44.5)	3/4 (19.1)	3/32 (2.4)	3/16 (4.8)	10	200
T201	C26D	—	—	1 3/4 (44.5)	—	1/4 (6.4)	—	50	500


IN (MM)

DOMESTOP-HIGH

T218



T218 C26D

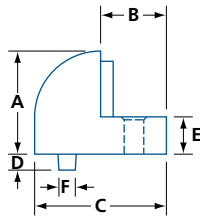

- For use with a threshold or undercut doors
- Heavy-duty zinc die-cast
- Non-marking rubber stop
- Includes wood screw and plastic anchor

MODEL	FINISH	A	B	øC	D	E	øF	/BOX	/CASE
T218	C26D, C3, C4	1 7/16 (36.5)	7/8 (22.2)	1 3/4 (44.5)	3/4 (19.1)	1/2 (12.7)	3/16 (4.8)	10	200


IN (MM)

DOMESTOP-UNIVERSAL

C229



C229 C26D

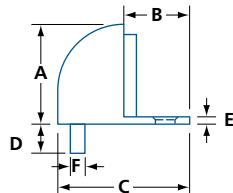

- For use with or without threshold
- Heavy-duty zinc die-cast
- Non-marking rubber stop
- Mounting hardware included: wood screw and plastic anchor

MODEL	FINISH	A	B	øC	D	E	øF	/BOX	/CASE
C229	C19, C26D	1 7/16 (36.5)	1 3/16 (20.6)	1 3/4 (44.5)	7/16 (11)	1/8 (3.2)	7/32 (5.6)	10	200

IN (MM)