


# TEMPLATE FOR INTERCONNECTING LOCK IL

Complete Installation using the Installation Instructions

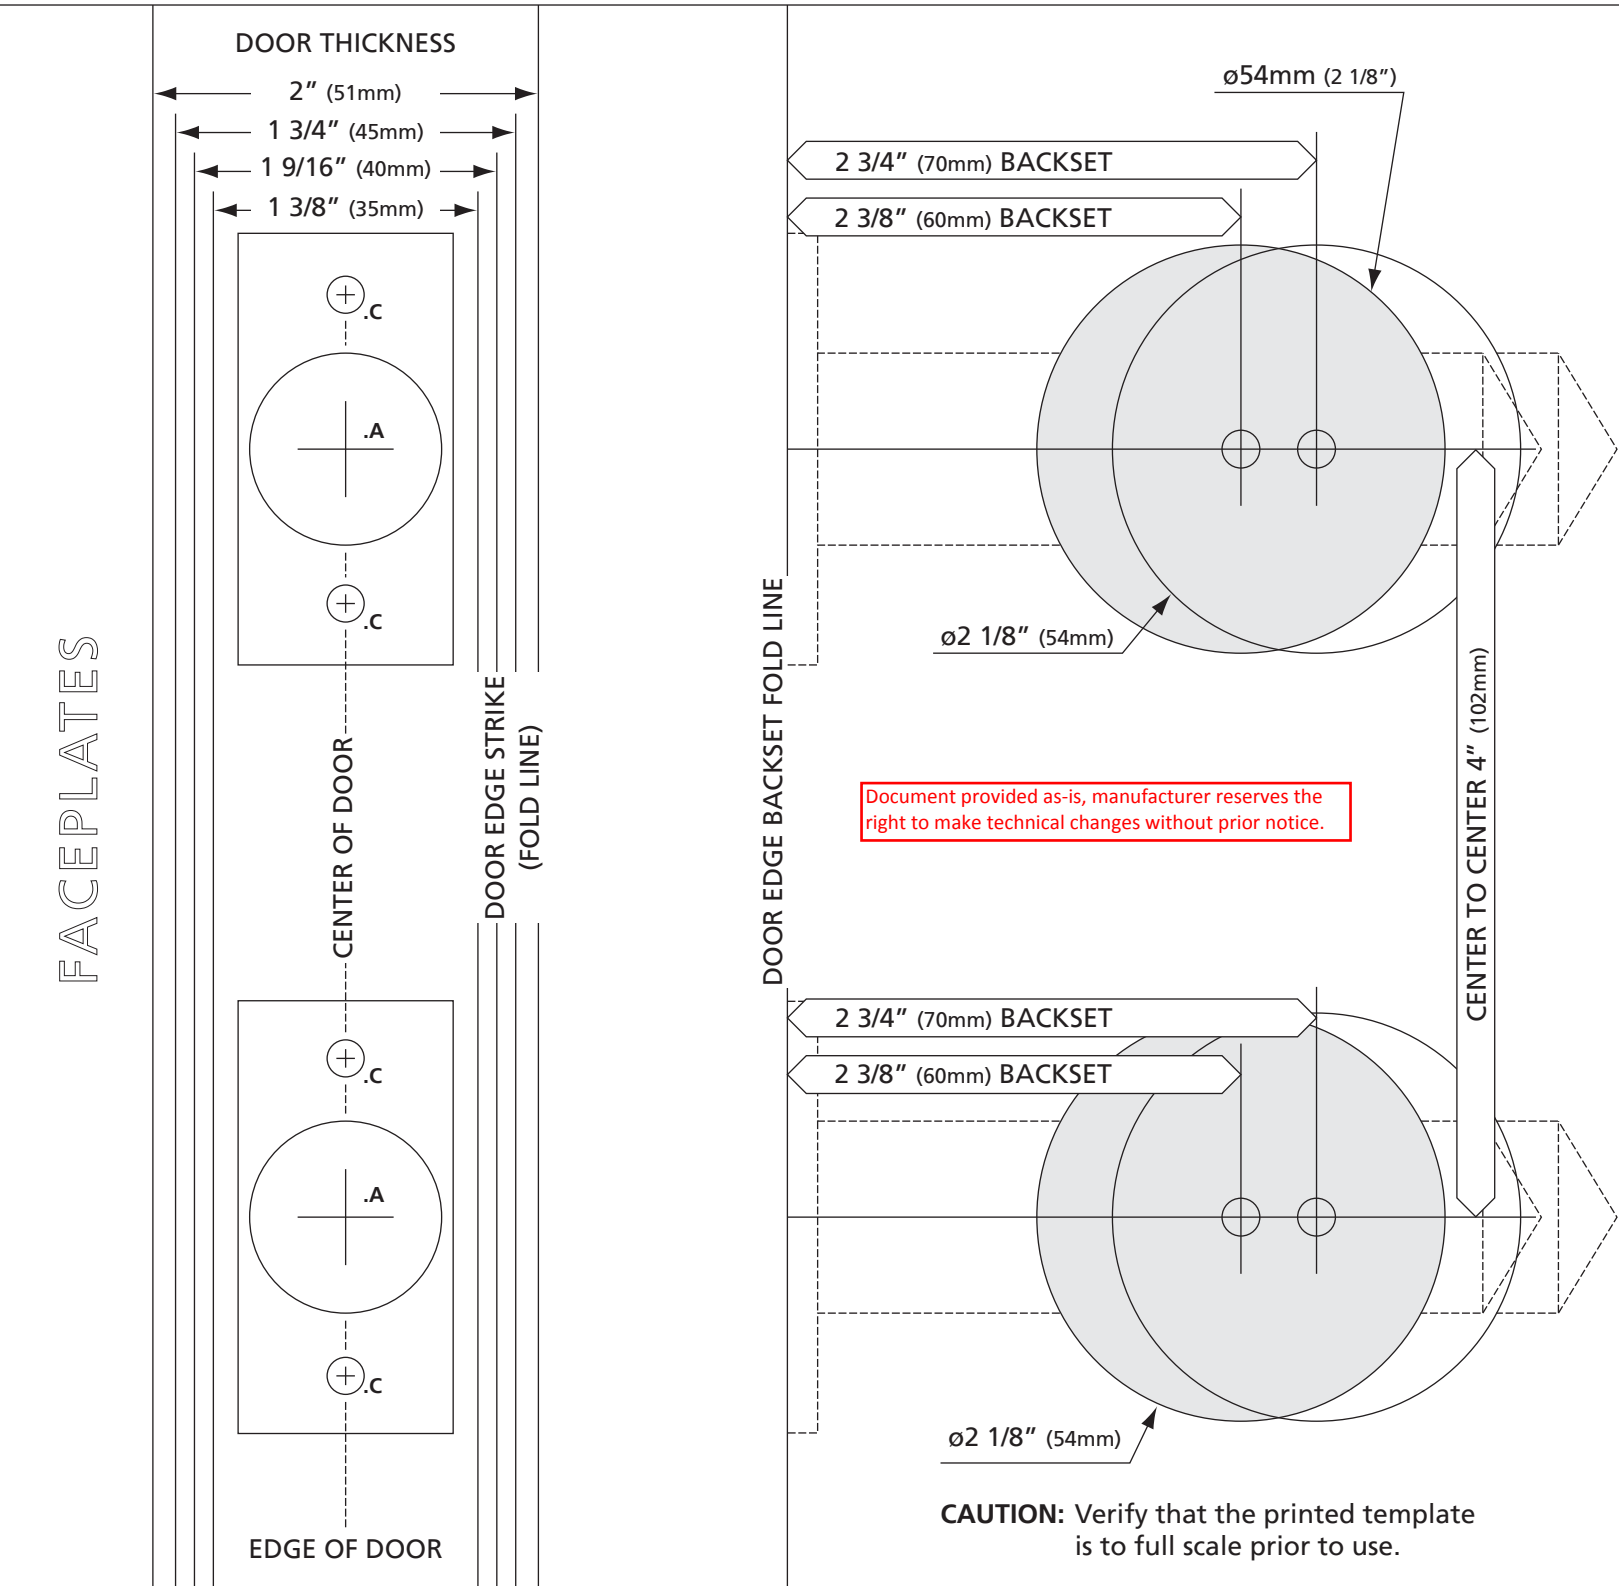

## DOOR & FRAME PREPARATION INSTRUCTIONS

- Holes "A":**
  - 1" (25.4mm) DIA:
  - 3 5/8" (92mm) deep for 2 3/8" backset
  - 4" (102mm) deep for 2 3/4" backset
- Holes "B":**
  - 1" (25.4mm) DIA x 1" (25.4mm) deep
- Mounting holes "C":**
  - 3/32" (2.5mm) DIA x 1" (25.4mm) deep pilot hole in wood doors and frames
  - Drill and tap 8-32 UNC on steel doors and frames
- Latchbolt and deadbolt faceplate (on door edge):**
  - 2 1/4" x 1 1/8" x 5/32" deep (57.2mm x 28.6mm x 4mm)
- Strike (on frame):**
  - 2 3/4" x 1 1/8" x 5/64" deep (70mm x 28.6mm x 2mm)
- Door prep to conform to**
  - ANSI A156.115 for steel doors and frames
  - ANSI A156.115-W for wood doors and frames

## STRIKES

