

DOREX®

Weather Seal Door Accessories

DGS-WAR480B-36

Door Sweep with Nylon Brush and Rain Drip

DGS-WAR480B-36

Door Sweep with Nylon Brush and Rain Drip




ITEM/FINISH:

DGS-WAR480B-36

LENGTH: 36"

NYLON BRUSH

MILL FINISH ALUMINUM

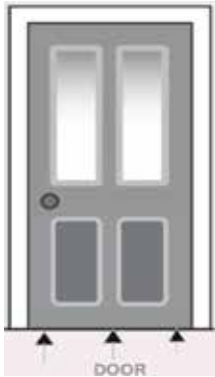

Packaging includes:

- Screws for wood and metal doors



Installation Guidelines:

CUTTING BRUSH:


1. Detach brush prior to trimming.
2. Cut off extra brush using a cutting tool (side cutting pliers) and crimp the brush strand ends.
3. Re-install the brush until it is level with one end of the retainer and crimp to hold it in place.

DOOR BOTTOM RETAINER:

1. Determine the required length, mark and cut the door bottom sweep to full width of the door.
2. When trimming, remove parts of the brush seal to be trimmed and use a cutting tool (lineman side cutting pliers) to compress the end of seal. This will retain the brush. Trim the aluminum retainer with a hacksaw.
3. Close the door and place door bottom sweep along outside bottom edge of door so that it makes contact with floor or threshold. Mark door in center of slotted holes.
4. Drill pilot holes in door at marks.
5. Fasten door bottom sweep to door with screws.
6. Adjust to ensure firm contact with threshold or finished floor.

Tools Required:

- Power drill
- Screw driver
- Marker
- Cutting tools (hacksaw & pliers)
- Measuring tape

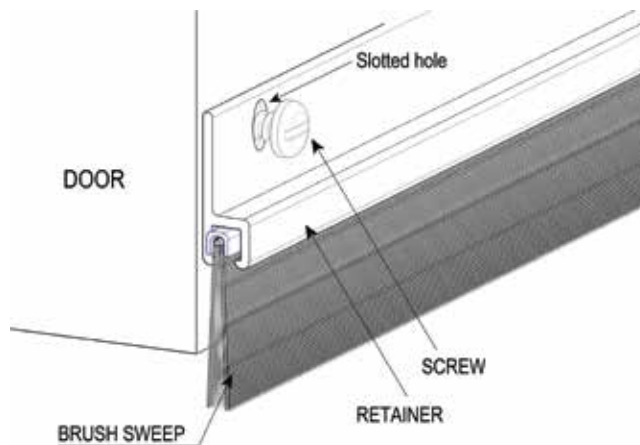

TESTING/RATINGS:



- cULus listed (UL10C)
- Wood fire door: 20 min
- Composite fire door: 90 min
- Metal fire door: 3 hrs

DOREX[®]


Accessoires pour portes à joint d'étanchéité

DGS-WAR480B-36

Coupe-froid avec brosse en nylon et arrêt de pluie

DGS-WAR480B-36

Coupe-froid avec brosse en nylon et arrêt de pluie

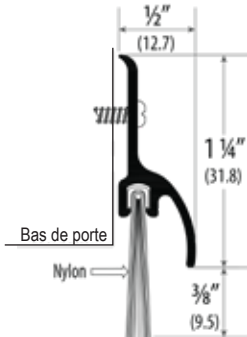


MODÈLE/FINITION :

DGS-WAR480B-36

LONGUEUR : 36"

BROSSE EN NYLON

ALUMINIUM FINITION USINE

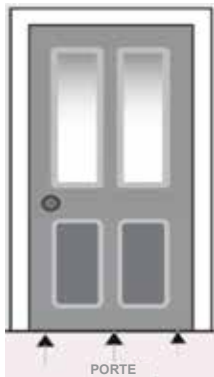

L'emballage comprend:

- Vis pour portes en bois et en métal



Guide d'installation :

DÉCOUPER LA BROSSE :


1. Détachez la brosse avant la coupe.
2. Couper la brosse à l'aide d'un outil de coupe (pince coupante latérale) et serrer les extrémités des brosses.
3. Réinstallez la brosse jusqu'à ce qu'elle soit au même niveau que l'une des extrémités du support et serrer-la pour la maintenir en place.

LA FIXATION DU BAS DE LA PORTE :

1. Déterminez la longueur nécessaire, marquez et coupez le bas de porte à la largeur totale de la porte.
2. Lors de la découpe, retirez la brosse et utilisez un outil de coupe (pince à découper latérale) pour comprimer l'extrémité du joint. Cela permet de retenir la brosse. Découpez le support en aluminium à l'aide d'une scie à métaux.
3. Fermez la porte et placez le balai de bas de porte le long du bord inférieur extérieur de la porte de manière à ce qu'il soit en contact avec le plancher ou le seuil. Marquez la porte au centre des trous oblongs.
4. Percez des avant-trous dans la porte au niveau des marques.
5. Fixer le balai de bas de porte à la porte à l'aide de vis.
6. Ajuster pour assurer un contact ferme avec le seuil ou du sol fini.

Outils nécessaires :

- Perceuse électrique
- Tournevis
- Marqueur
- Outils de coupe (scie à métaux et pince)
- Ruban à mesurer

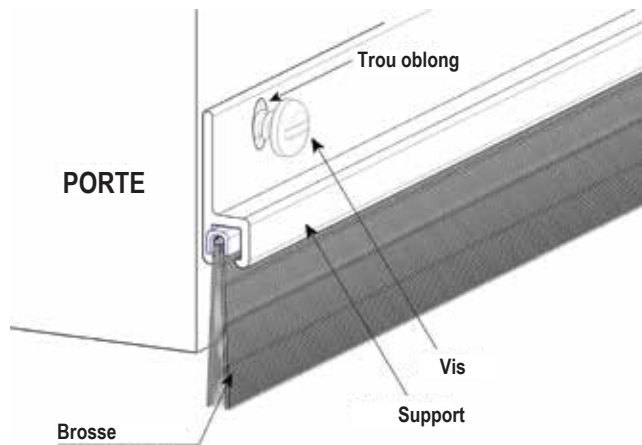

TESTS / ÉVALUATIONS :



- Homologué cULus (UL10C)
- Porte coupe-feu en bois : 20 min
- Porte coupe-feu en composite : 90 min
- Porte coupe-feu en métal : 3 hrs