


DM SERIES

SÉRIE

MORTISE LOCK

SERRURE À MORTAISE

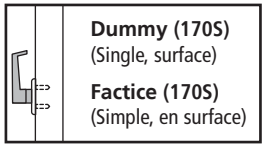

SINGLE SECTIONAL LEVER / KNOB DUMMY (SURFACE MOUNT)

INSTALLATION TEMPLATE

LEVIER / BOUTON SECTIONNEL FACTICE, SIMPLE (MONTÉE EN SURFACE)

GABARIT D'INSTALLATION

Installation Requirements

- Door must provide an area of solid material at least 5 x 10" (127 x 254 mm) in the location where the lock cavity will be made. Without adequate support, the installation will warp or bow the door surface.
- Confirm door thickness. If other than 1 3/4" (44.5 mm) please consult your hardware supplier.
- Verify lock handing prior to initiating installation. If required, reverse handing.
- Confirm scale on door preparation template and read the instructions carefully for proper door preparation and lock installation.
- Do not over-tighten screws, excessive tightening may affect the installation.
- Surface mounting is recommended on wood or hollow metal doors without the use of a door closer. If door uses a door closer, use the through-bolt dummy model (DM 171).
- Position of cutouts and holes on door should be precise as indicated on the installation template.

Exigences d'installation

- La porte doit fournir une surface de matériau solide d'au moins 5 x 10" (127 x 254 mm) à l'endroit où la cavité de la serrure sera faite. Sans support adéquat, l'installation déformera ou inclinera la surface de la porte.
- Confirmer l'épaisseur de la porte. Si autre que 1 3/4" (44,5 mm), veuillez consulter votre fournisseur de matériel.
- Vérifiez la main de la serrure avant de commencer l'installation. Si nécessaire, inverser selon les instructions.
- Validé l'échelle du gabarit pour la préparation de la porte et lire attentivement les instructions pour la préparation de la porte et l'installation de la serrure.
- Ne pas trop serrer les vis, le serrage excessif peut affecter l'installation.
- Le montage en surface est recommandé sur les portes en bois ou en métal creux sans utilisation d'un ferme-porte. Si la porte utilise un ferme-porte, utilisez le modèle factice à boulon traversant (DM 171).
- L'emplacement des découpes et des trous sur la porte doit être précis comme indiqué sur le gabarit des installations.

ATTENTION

Do not use template if not to scale.
To verify confirm boxed dimensions

N'utilisez pas ce gabarit s'il n'est pas à l'échelle. Pour vérifier, confirmer les dimensions encadrées.

