TEMPLATE FOR INTERCONNECTING LOCK IL

Complete Installation using the Installation Instructions

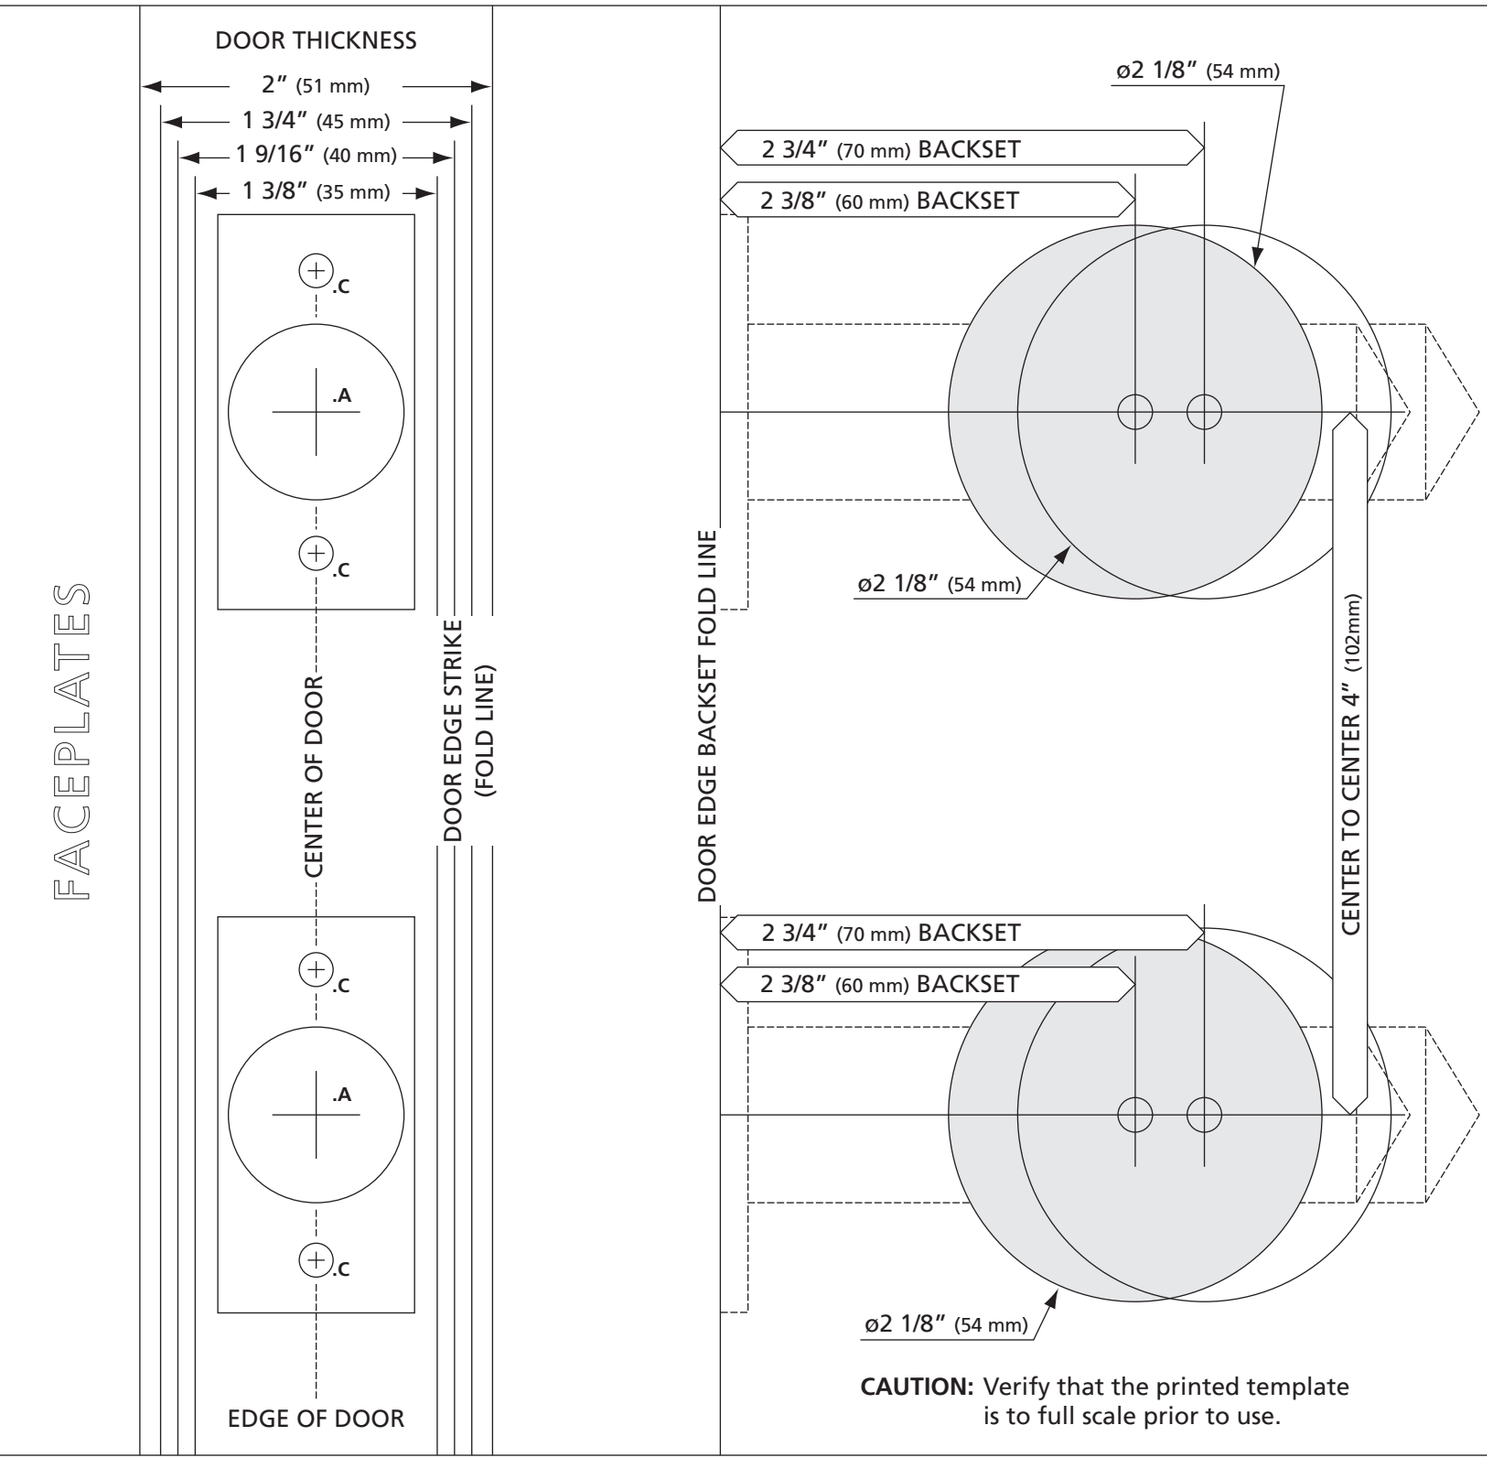

CAUTION: Verify that the printed template is to full scale prior to use.

DOOR & FRAME PREPARATION INSTRUCTIONS

1) Holes "A":
- 1" (25.4 mm) DIA:
- 3 5/8" (92 mm) deep for 2 3/8" (60 mm) backset
- 4" (102 mm) deep for 2 3/4" (70 mm) backset

2) Holes "B":
- 1" DIA x 1" (25.4 DIA x 25.4 mm) deep

3) Mounting holes "C":
- 3/32" DIA x 1" (2.5 DIA x 25.4 mm) deep pilot hole in wood doors and frames
- Drill and tap 8-32 UNC on steel doors and frames

4) Latchbolt and deadbolt faceplate (on door edge):
For 2 3/8" (60 mm) backset:
2 1/4 x 1 x 5/32" (57.2 x 25.4 x 4 mm) deep
For 2 3/4" (70 mm) backset:
2 1/4 x 1 1/8 x 5/32" (57.2 x 28.6 x 4 mm) deep

5) Strike (on frame):
2 3/4 x 1 1/8 x 5/64" (70 x 28.6 x 2 mm) deep
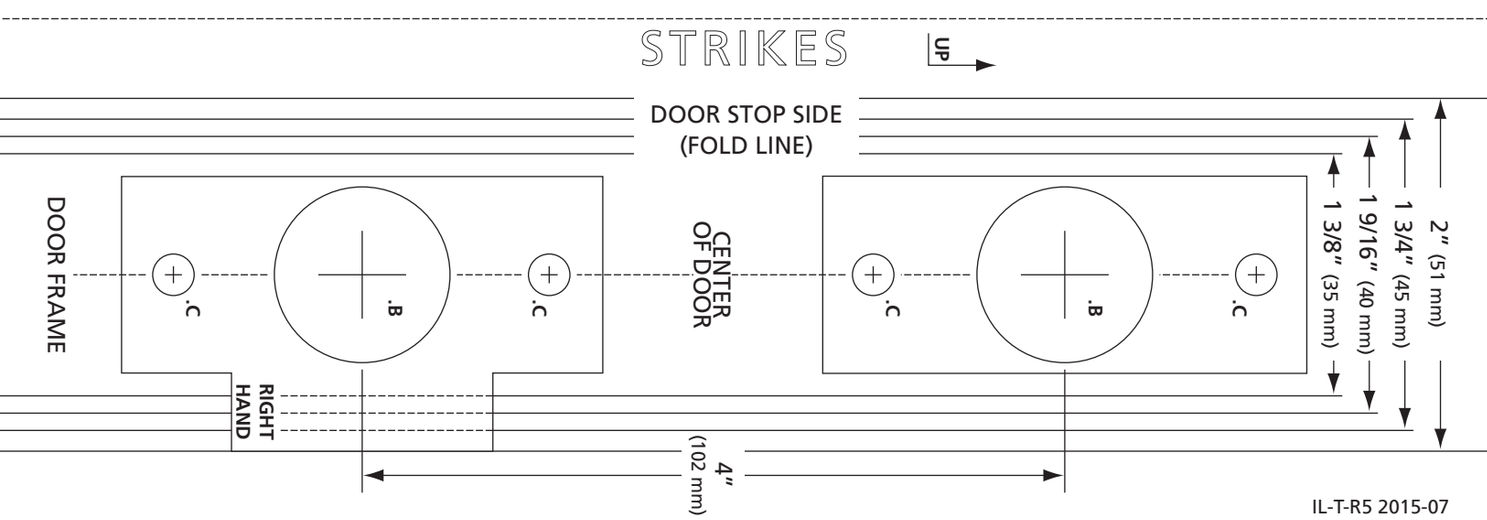
6) Door prep to conform to
- ANSI AI56.115 for steel doors and frames
- ANSI AI56.115-W for wood doors and frames